

TERRAIN FORGE


You will need:

- .Wood Glue
- .Craft Knife
- .Sandpaper


How To Build: UK Spec Large Ruin

Always test fit pieces before applying any glue. Lightly sand the places where you wish to apply glue, this helps to create a stronger bond between the two surfaces. Always use a strong wood glue, craft pva glue is not recommended.


- 1: Carefully remove all the pieces from the sprue, making sure to be extra careful on the smaller pieces. We advise cutting the tabs with a sharp craft knife on the smaller, more delicate pieces.

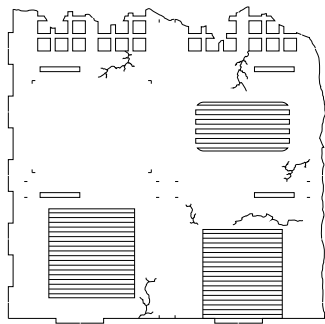


x1

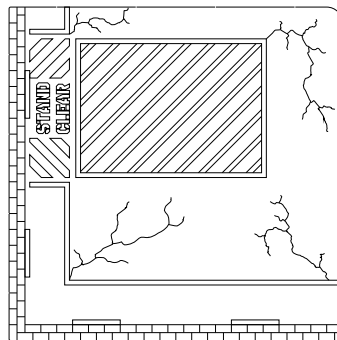


x1

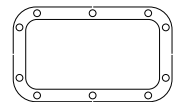


x2

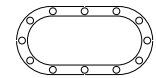


x4

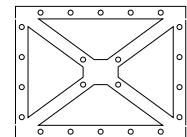


x1

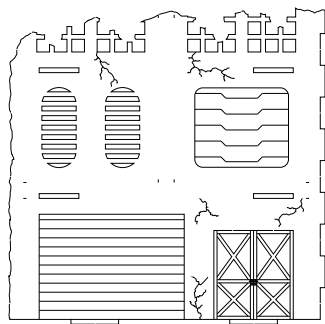

x1

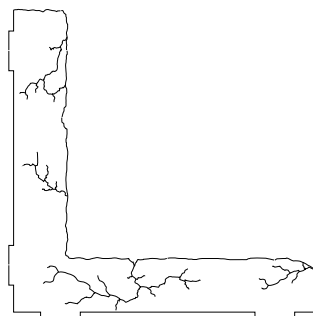


x2

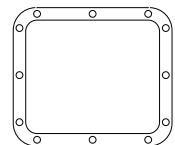

x1



x1

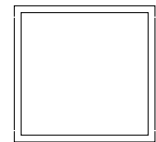

x1



x1




x1



x1



x1



x1



x2





x1





x1



2: Take the first wall face, and glue on all the frames as shown

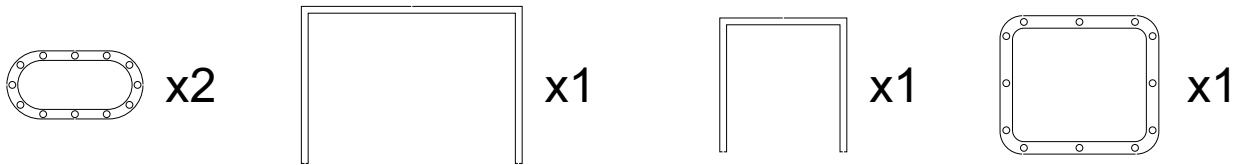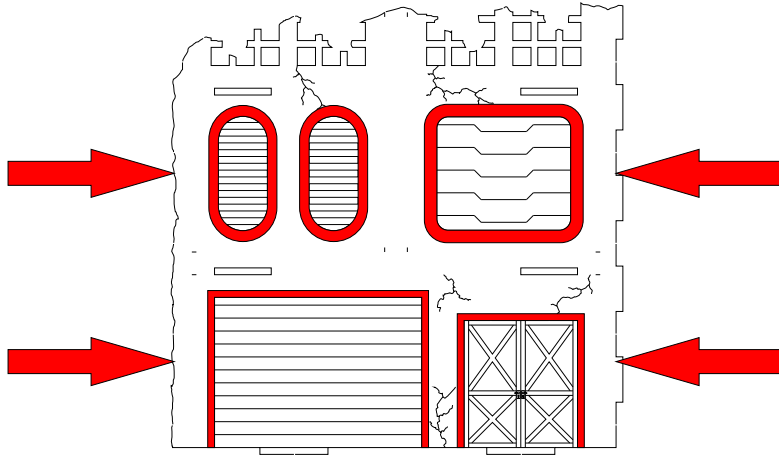






3: Now glue on all the edging strips, following the order below. There are some guidelines on the walls to help with alignment

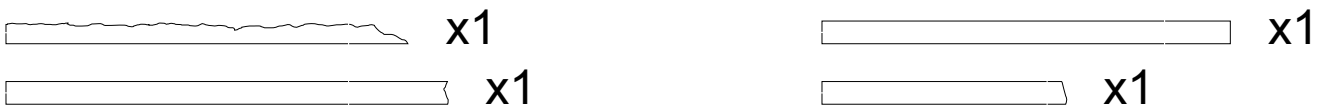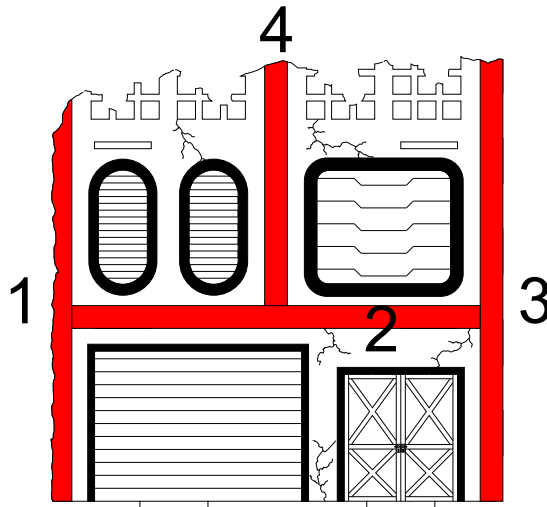



4: Flip the wall over, and glue on the last two oval frames as shown

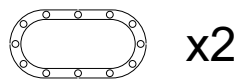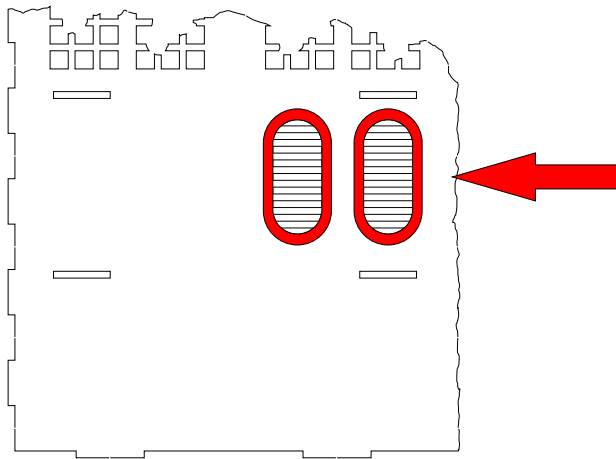



5: Now take the second wall section, and glue on all the frames

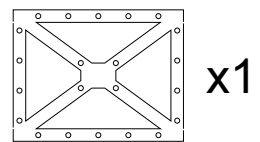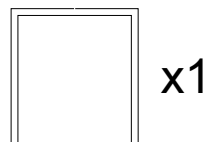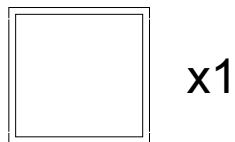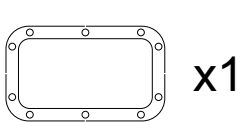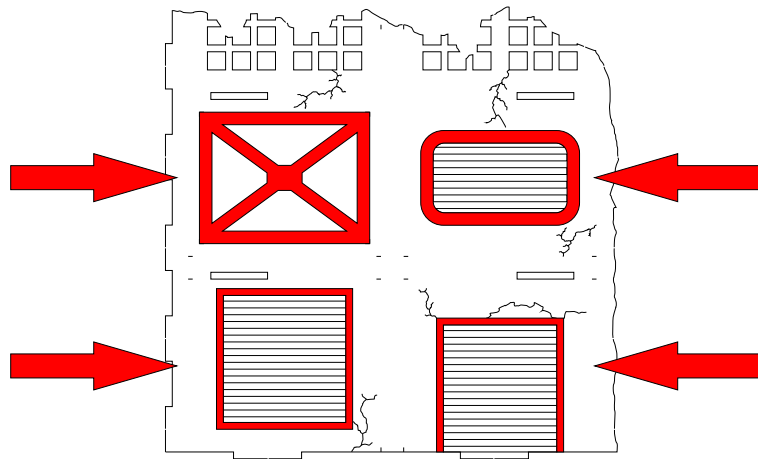



6: Glue on all the edging pieces, following the order below. There are guidelines on the wall to help with alignment

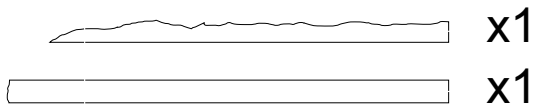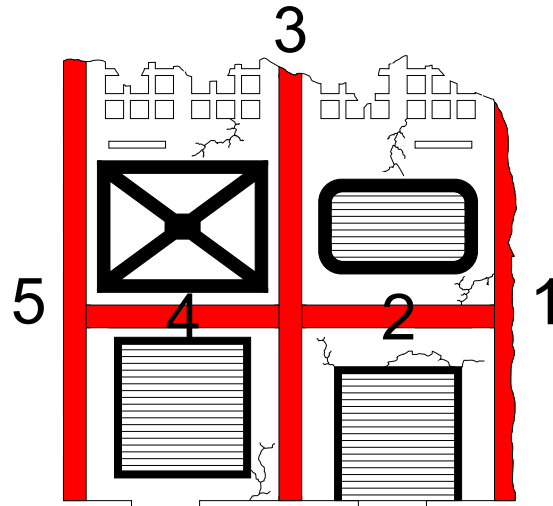


7: Flip the wall over, and glue on the last frame as shown

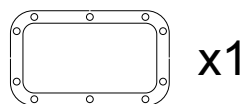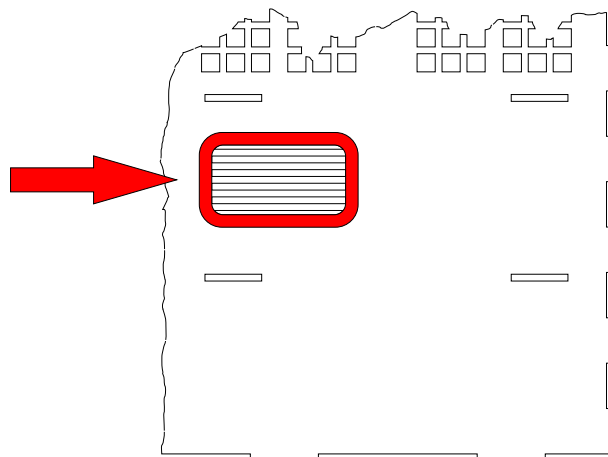

8: Finally, glue the floors into place using the highlighted slots and tabs.
Then slot your finished ruin onto the base.

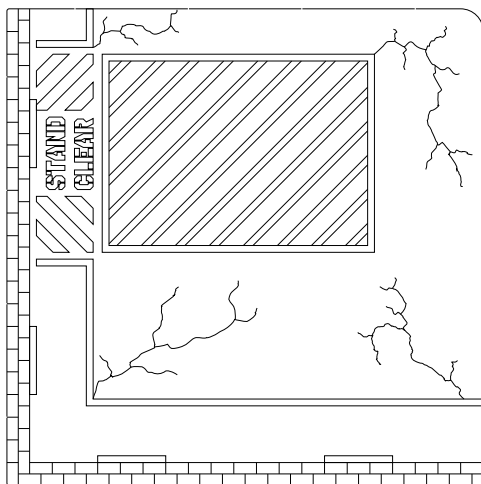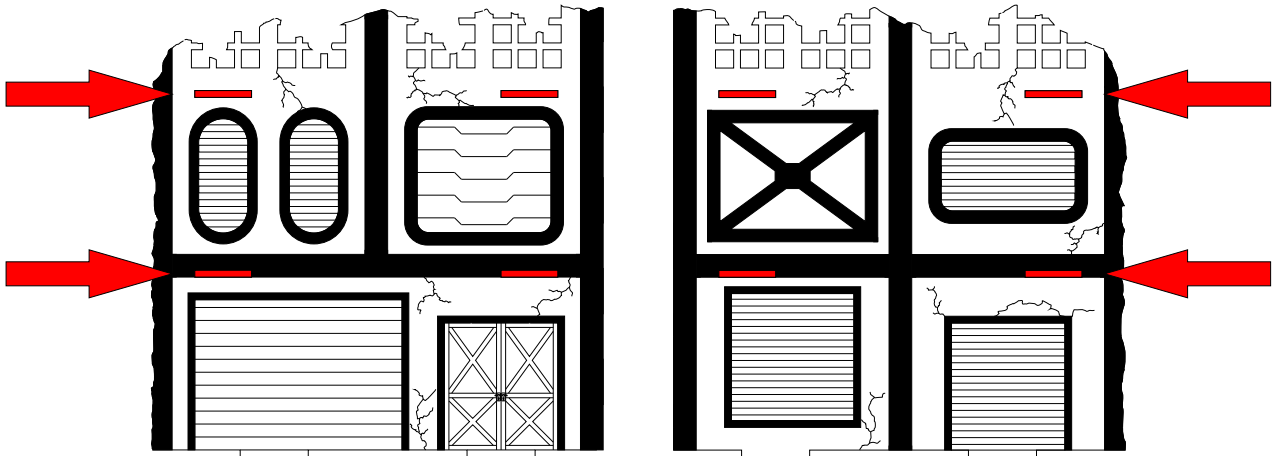

x1

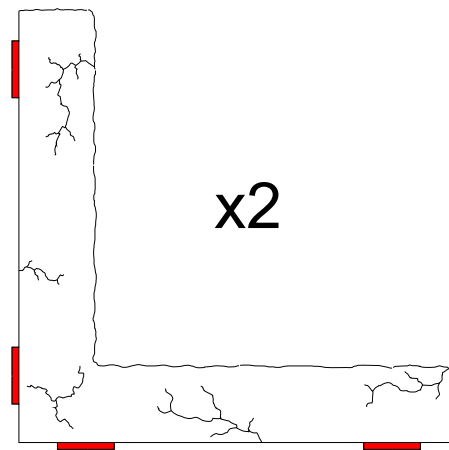

x2

9: Your UK Spec Large Ruin is now complete