

TERRAIN FORGE


You will need:

- .Wood Glue
- .Craft Knife
- .Sandpaper


How To Build: UK Spec Tiny Ruins

Always test fit pieces before applying any glue. Lightly sand the places where you wish to apply glue, this helps to create a stronger bond between the two surfaces. Always use a strong wood glue, craft pva glue is not recommended.


- 1: Carefully remove all the pieces from the sprue, making sure to be extra careful on the smaller pieces. We advise cutting the tabs with a sharp craft knife on the smaller, more delicate pieces.

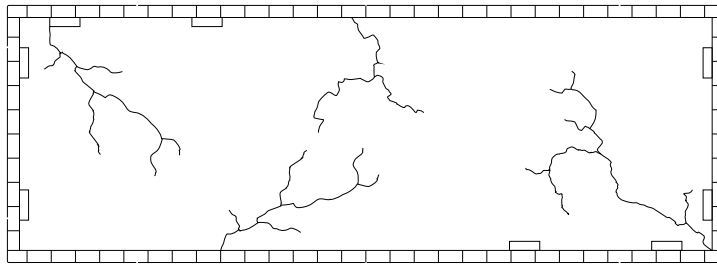


X1

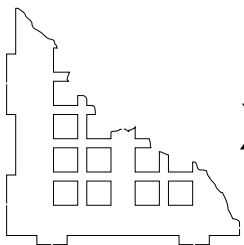


X1

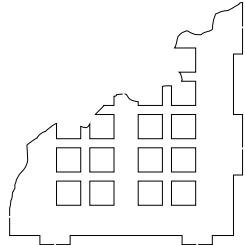


X1

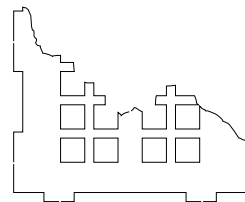

X1

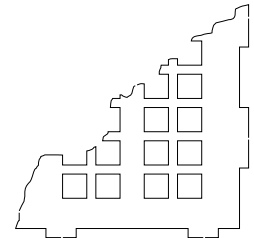


X1



X1



X1




X1



X1




X1



X1




X1




X1

2: Lay out all the wall pieces, and glue on all the edging strips, making sure to test fit the pieces before glueing them.

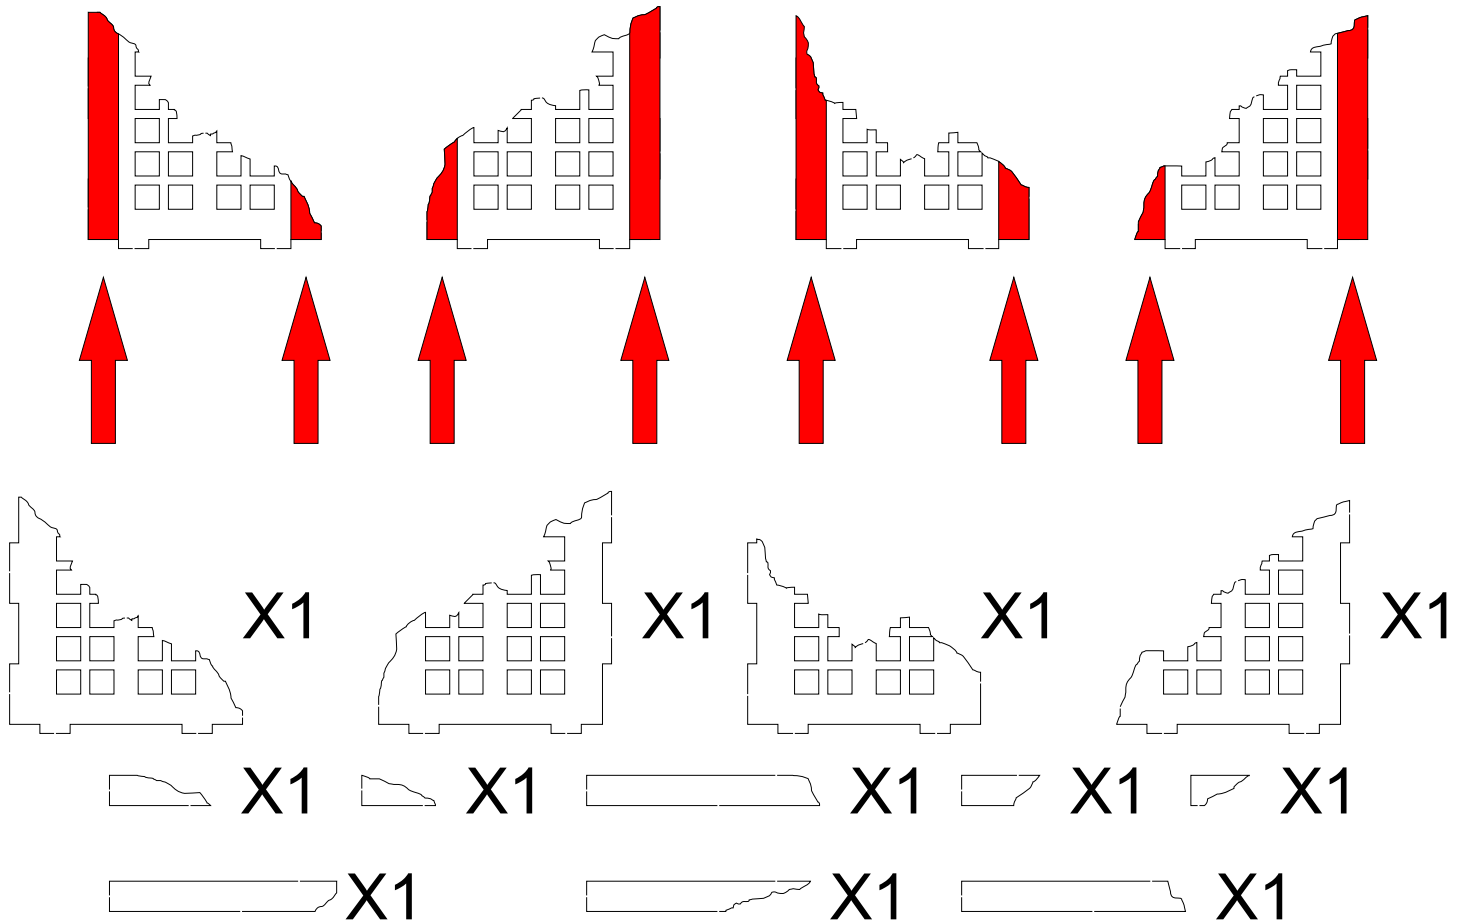

3: Now take the finished walls and glue them together using the corner tabs, then glue them down onto the base piece, using the slots and tabs highlighted below

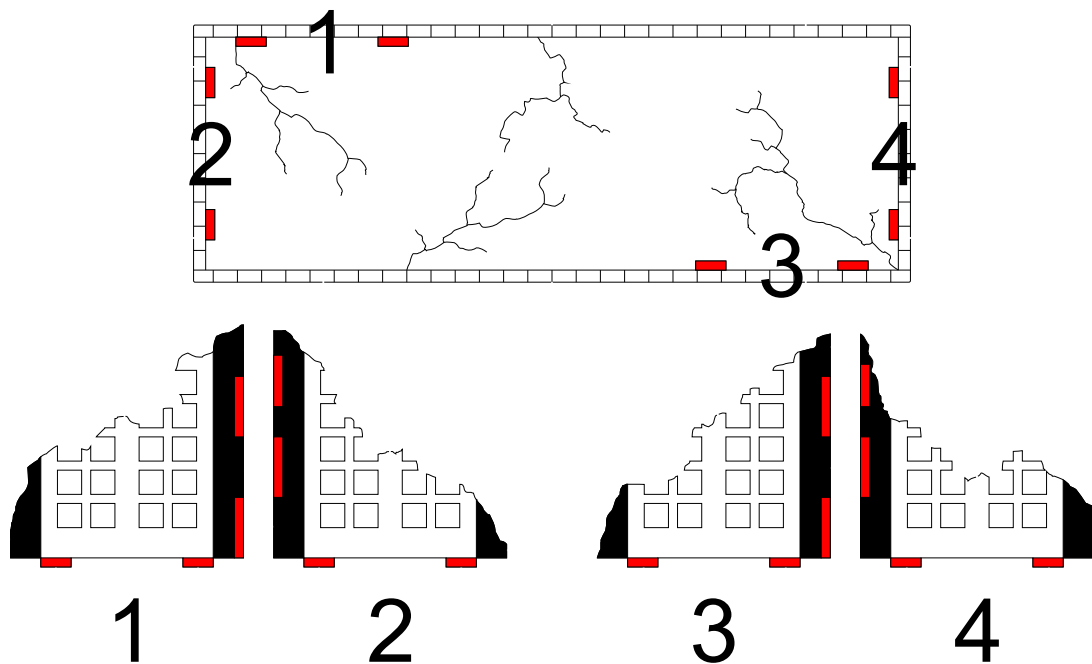

4: Your UK Spec Tiny Ruins are now complete